


**eterno** nature's second best

eterno

Code Z2

Dimension 155 x 125 cm



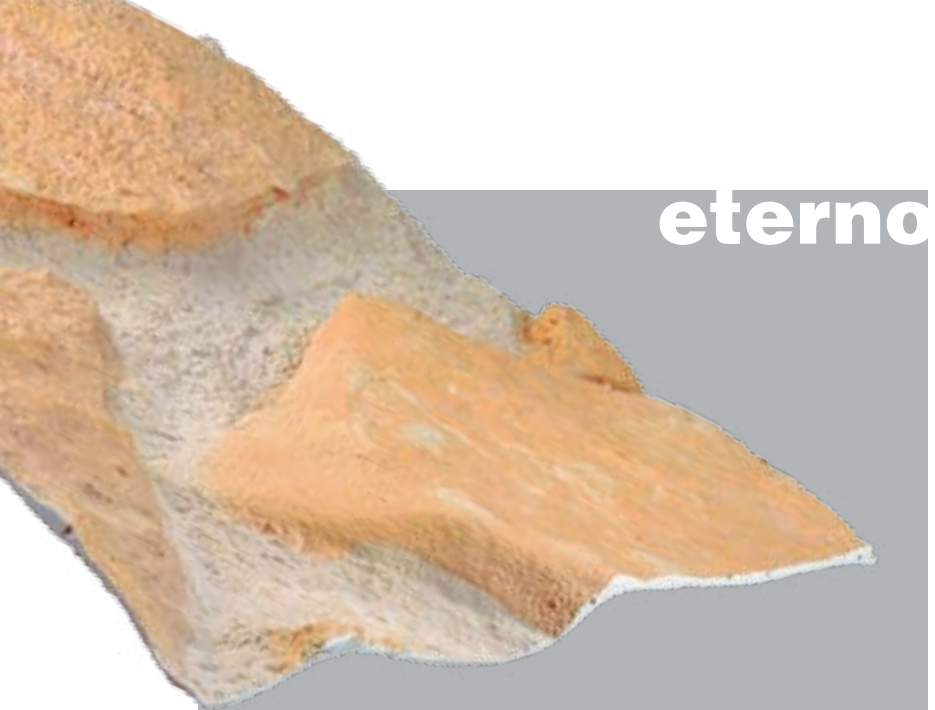

eterno

Code N3

Dimension 300 x 130 cm



eterno

Code N6

Dimension 300 x 130 cm



eterno

Code **O4**

Dimension 284 x 130 cm





Code A3

Dimension 300 x 125 cm





eterno

Code D1

Dimension 300 x 120 cm





eterno

Code **U6**

Dimension 286 x 130 cm








eterno

Code E0

Dimension 155 x 118 cm



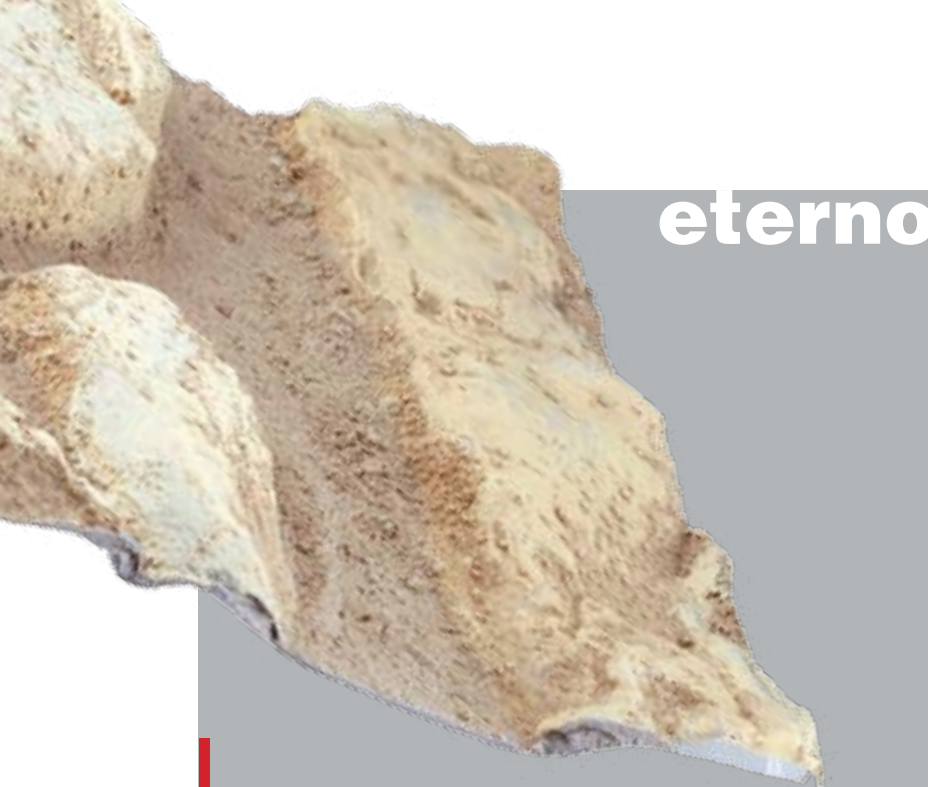

eterno

Code S1

Dimension 281 x 131 cm



eterno

Code **U3**

Dimension 286 x 130 cm



eterno

Code N8

Dimension 300 x 130 cm



# eterno

Code O41



■ Dimension 48 x 48 x 280 cm

Code D11




■ Dimension 46 x 46 x 300 cm

Code L41



■ Dimension 46 x 46 x 300 cm

Code B31

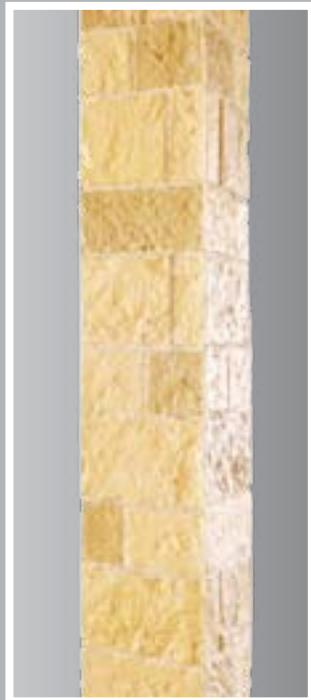


■ Dimension 46 x 46 x 280 cm

Code D61



■ Dimension 32 x 32 x 300 cm

Code L40

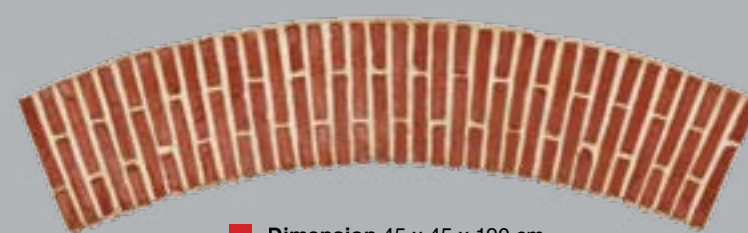

■ Dimension 45 x 45 x 190 cm

Code D10



■ Dimension 46 x 46 x 200 cm

Code D60



■ Dimension 30 x 30 x 200 cm

Code B30



■ Dimension 46 x 46 x 205 cm

## columns and arches

# eterno

Code Z2



■ Dimension 155 x 125 cm

Code N6



■ Dimension 300 x 130 cm

Code N3




■ Dimension 300 x 130 cm

Code O4



■ Dimension 284 x 130 cm

Code A3

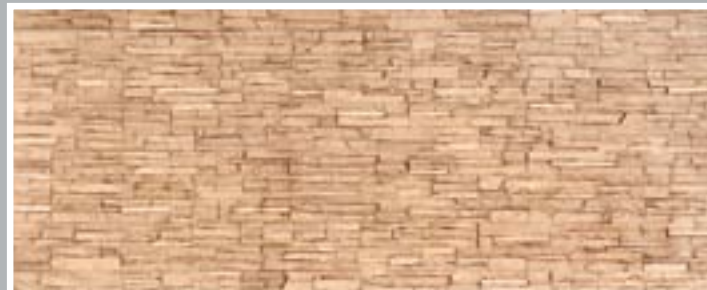

■ Dimension 300 x 124 cm

Code D1



■ Dimension 300 x 120 cm

Code E0



■ Dimension 155 x 118 cm

Code N8



■ Dimension 300 x 130 cm

Code U6



■ Dimension 286 x 130 cm

Code S1



■ Dimension 281 x 131 cm

Code U3



■ Dimension 286 x 130 cm

index

1



Measure the surface where the installation will be made and count the panels to cut.

Cut the panels with a fretsaw.

2



Put the panel on the surface and drill (in the mortar joints, never on the bricks or stone) with a 6mm bit. Then fix the panels using screws.

3



Fill the joints and hide the screws heads with Mastic mixture.

4



Texture the Mastic with light strokes of a Brush. Use Acetone to remove the mastic off the brush to maintain the course texture.

5



With the aim of integrating the colors perfectly, rub the surface lightly with a rag.